


## **TABLE BASE ASSEMBLY** Stainless Steel - Square Style Bases

For: 5000 Verona Line With Round Column See Catalog for Top Size Recommendations

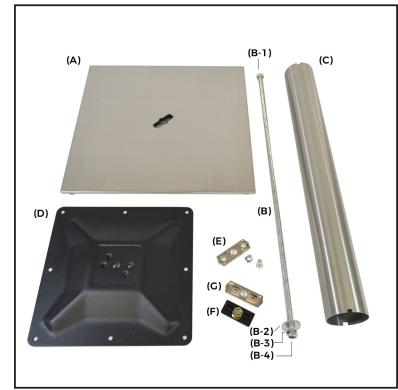

## Part List:

- A- Base Plate
- **B** Connecting Rod
- B-1 M12 Hex Nut
- B-2 Flat Washer
- B-3 Lock Washer
- B-4 M12 Self-Locking Hex Nut
- **C-** Column
- D- Top Plate
- E- Upper Column Alignment Clip
- **F** Bottom Clip
- G- Lower Column Alignment Clip

## Instructions:

- Step 1 Insert the lower column alignment clip (G) into the top of the base plate (A) and the bottom clip (F) into the bottom of the base plate and press them together.
- Step 2 Thread the connecting rod (B) into the base assembly making sure it threads completely through but does not touch the floor. Tighten the hex nut (B-1) as shown below.
- Step 3 Slide the column (C) over the rod and align the two notches onto the clip (G) making sure it sits flat on the base plate.
- Step 4 Install the upper column alignment clip (E) with the two Phillips head screws onto the top plate (D).
- **Step 5** Slide the top plate assembly over the rod. Make sure the upper alignment clip fits into the notches of the column.
- Step 6 Slide the flat washer (B-2) and lock washer (B-3) over the rod and tighten with the self-locking nut (B-4).

You are now ready to mount your table top!



1255 South Park Dr., Kernersville, NC 27284, USA Tel. 336-996-7774, Toll Free 800-222-6941, Fax: 336-996-1812 Website: www.petermeier.com Email: info@petermeier.com